



Video Server VS2403

Quick Installation Guide

This guide describes the basic functions of VS2403. All detailed information is described in the user's manual.

6F., No. 192, Lien-Cheng Rd., Chung-Ho, Taipei County, Taiwan
Tel: +886-2-8245-5282 Fax: +886-2-8245-5532
E-mail: sales@vivotek.com <http://www.vivotek.com>

1 Check Package Contents


● VS2403



● Power Adapter



● Camera Control Cable

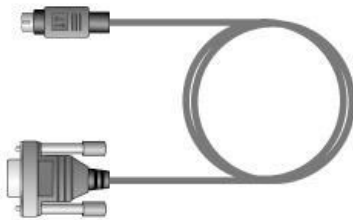

● Mounting Kit



● Software CD



● I/O Connector



● Quick Installation Guide




● Warranty Card




2 Physical Description


● Front Panel

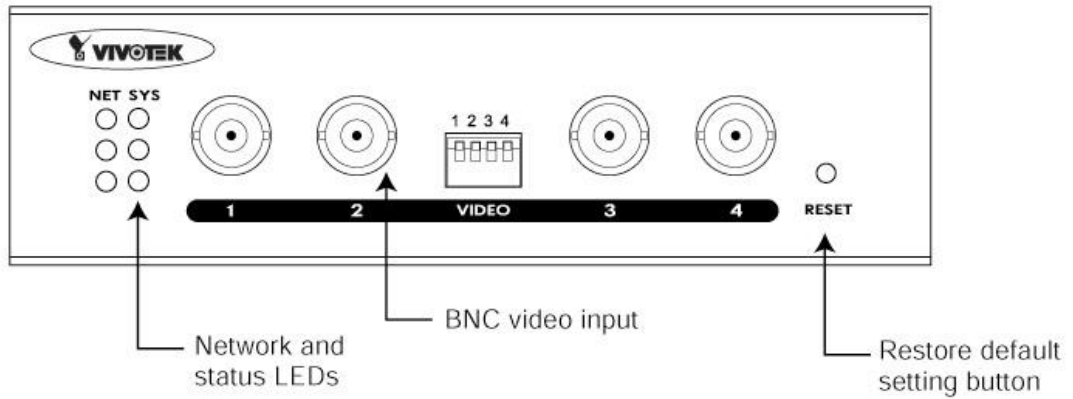

● Rear Panel

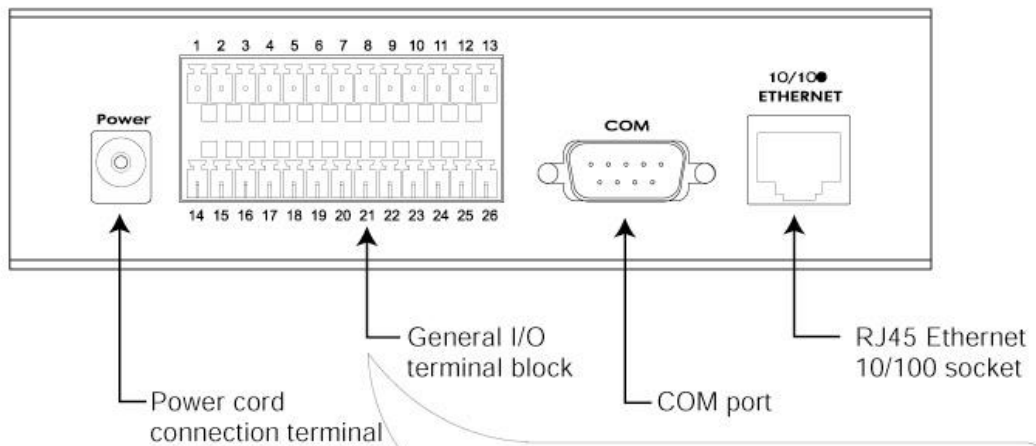


Note the serial number on the label of the unit.
 The serial number is the same as the Ethernet address,
 for example: 0002D1000012=00-02-D1-00-00-12

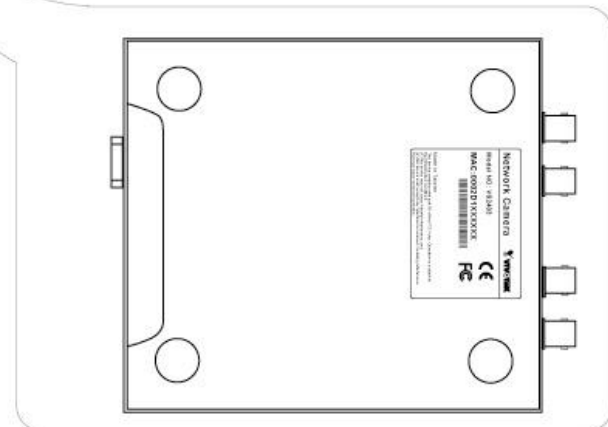


3 Make Connections

● Install the Video Server to an Ethernet Network

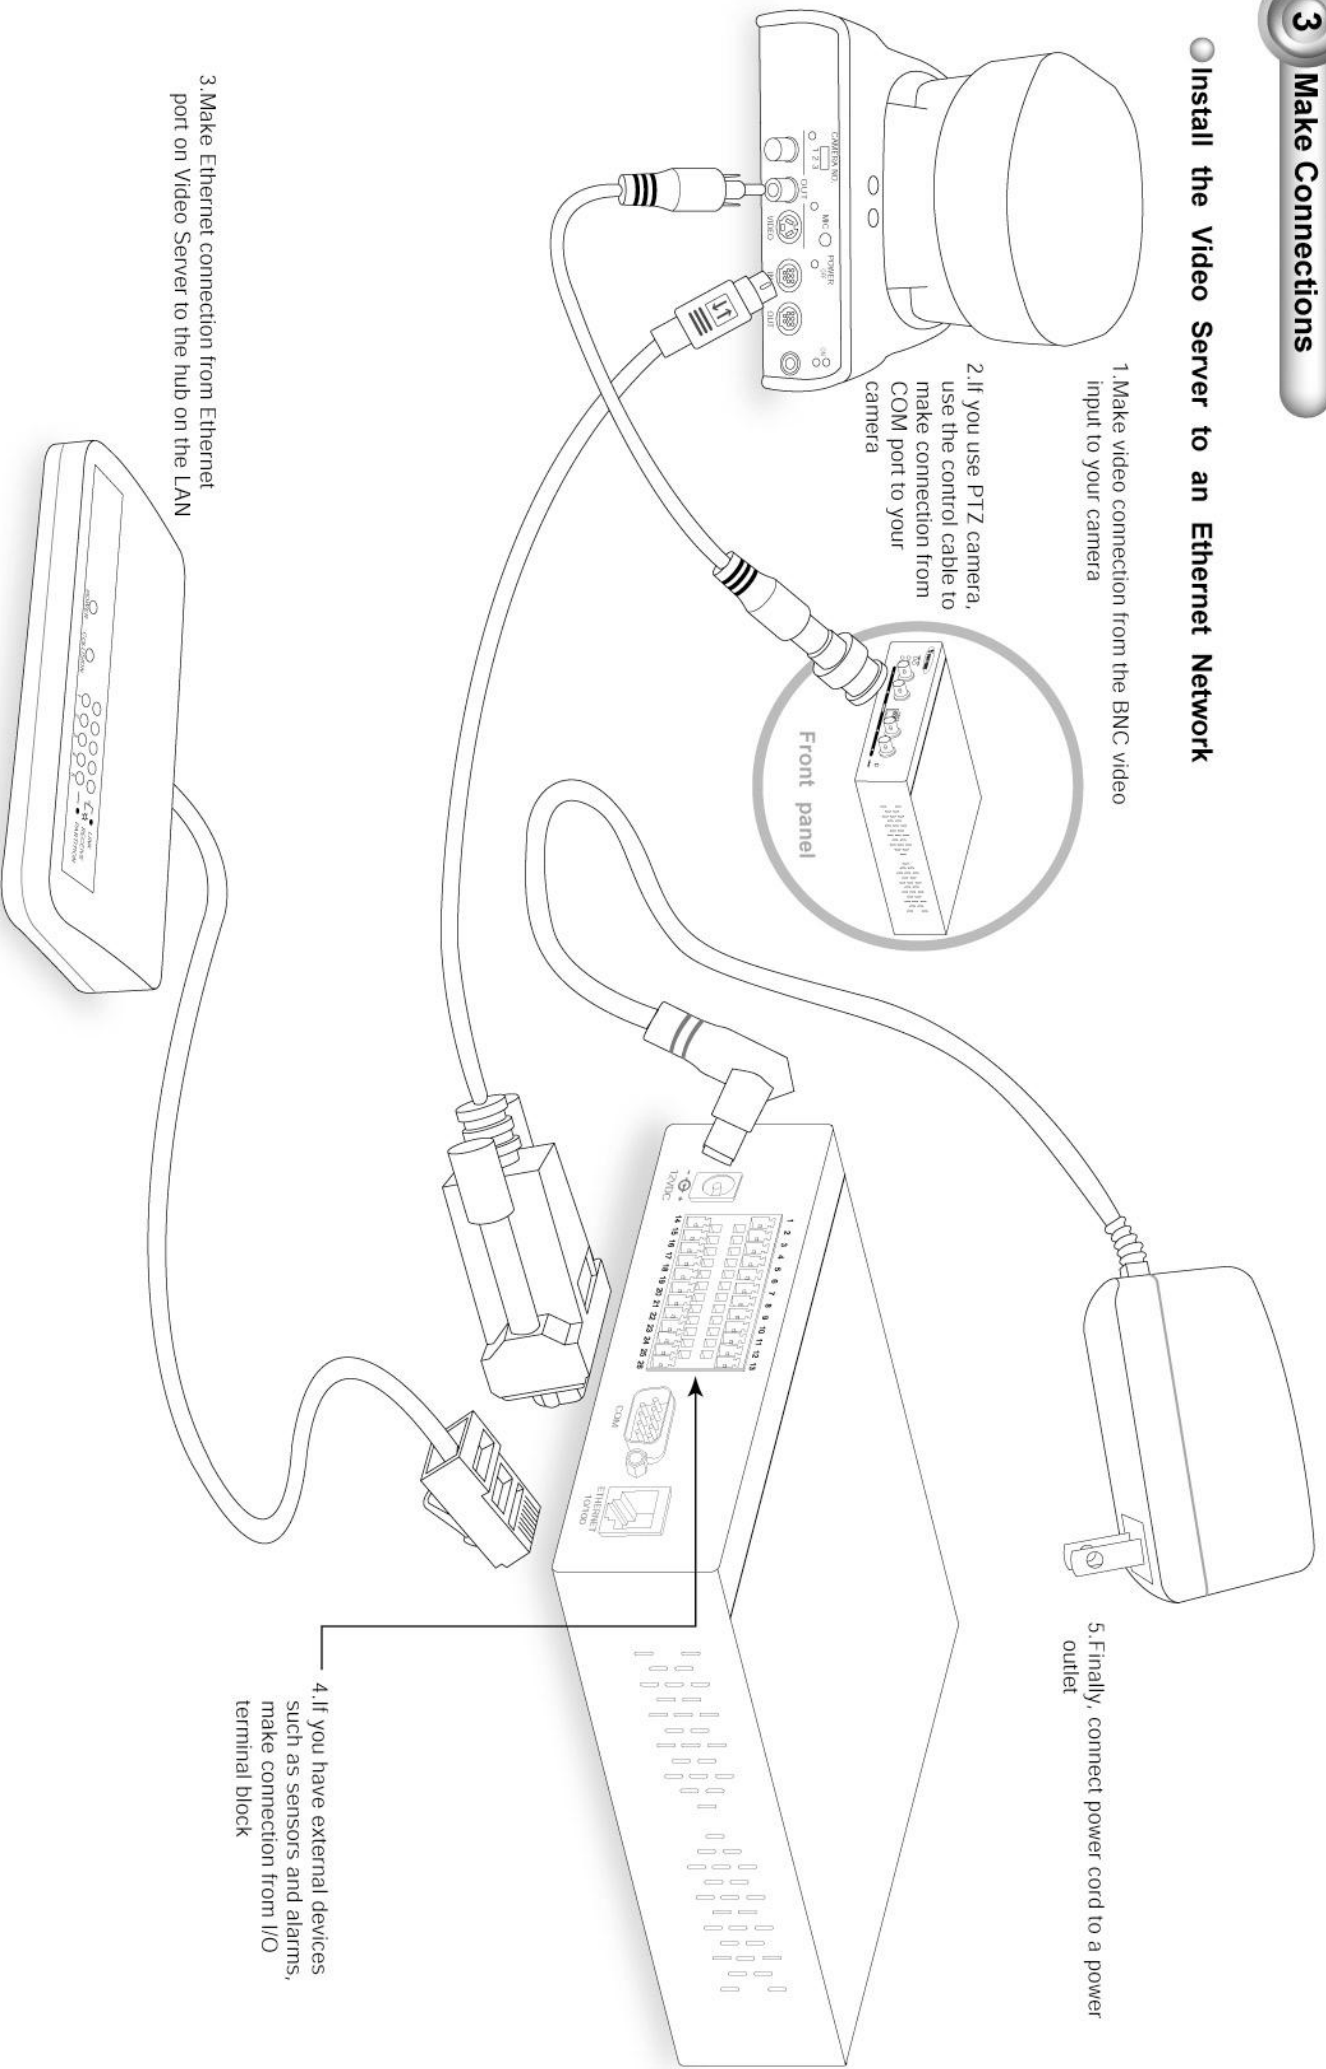


4 Assign IP address

1. Run the "Installation Wizard" under "Utility" directory on the software CD.
2. The program will search Vivotek Video Servers or Network Cameras on the same LAN.

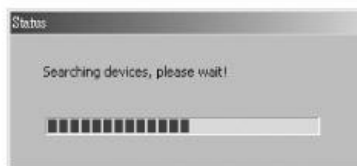

3. After searching, the main installer window will pop up. Click on the serial number that matches your Video Server's serial number.

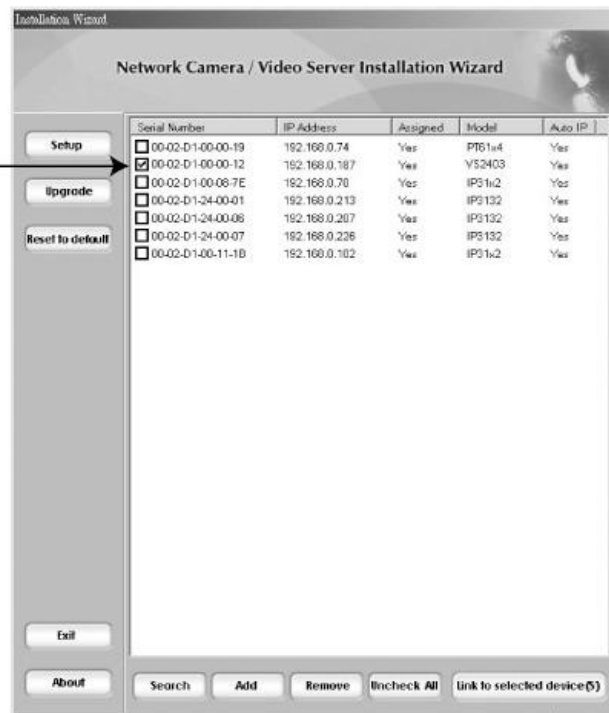

4. Click "Link to selected device(s)" to connect the Internet Explorer to the Video Server.

※ If there is no DHCP server on the LAN, please refer to the user's manual for the methods of assigning an IP address.

5 The Internet Explorer Connects to the Video Server



For further setup, please check the user's manual on the software CD.

 **Warning**

- **Power off the Video Server as soon as it is found smoking or smelt unusual.**




Contact your distributor when such cases happen.

- **Keep the Video Server away from the water. If the Video Server is wet, power off immediately.**




Contact your distributor when such cases happen.


- **Do not place the Video Server around the heat sources, such as television or oven.**

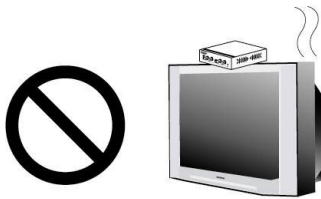


- **Refer to your user's manual for the operating temperature.**

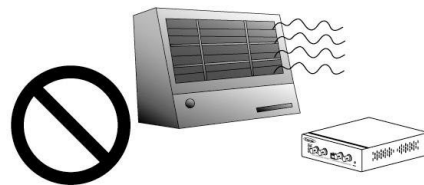


- **Do not place the Video Server on unsteady surfaces.**

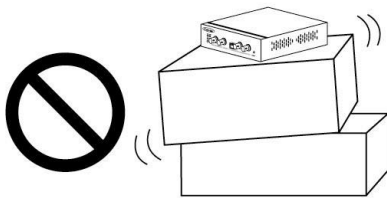

- **Do not place the Video Server in high humid environments.**

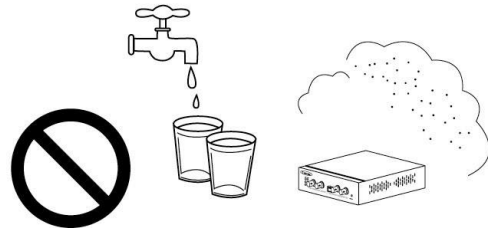

- **Do not disassemble the Video Server.**

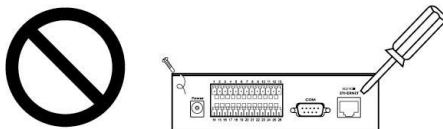

- **Do not drop the Video Server.**

